



Electric Installation manual (EBW)

for


S-plus V₂



SAMMITR

Electric Lock Installation Manual EBW

S-Plus V2

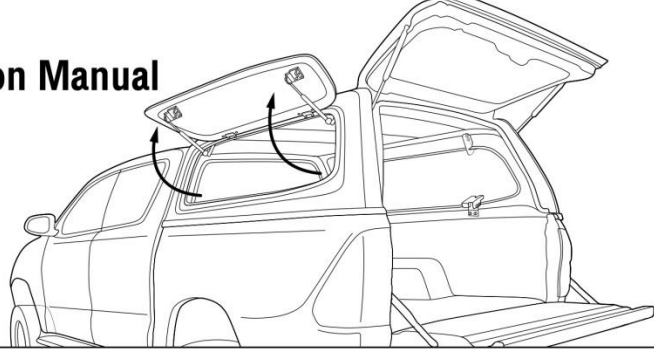


Canopy Wire set



C1: Harness Central
Lock No.38

Require Tool




T1 : 10 mm. Wrench




T2 : 19 mm. Wrench

1

Install Canopy On Tub

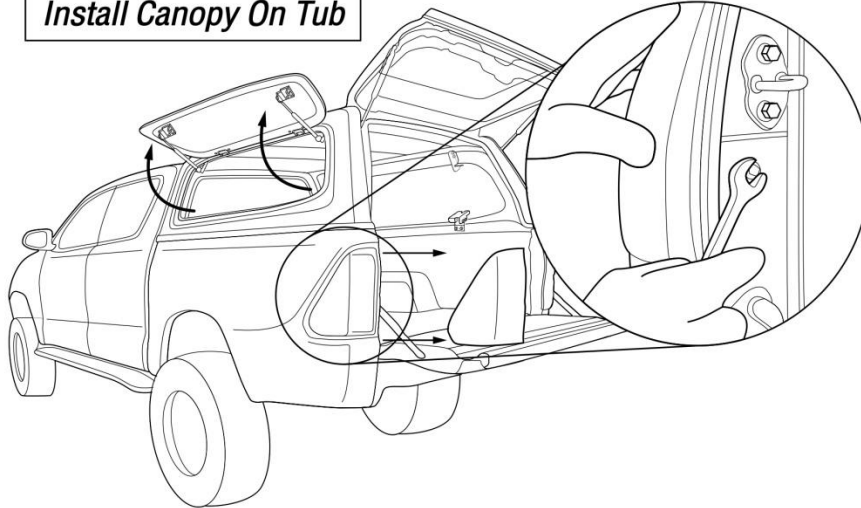


After installed canopy on the Tub.Take off the rear light of the truck.

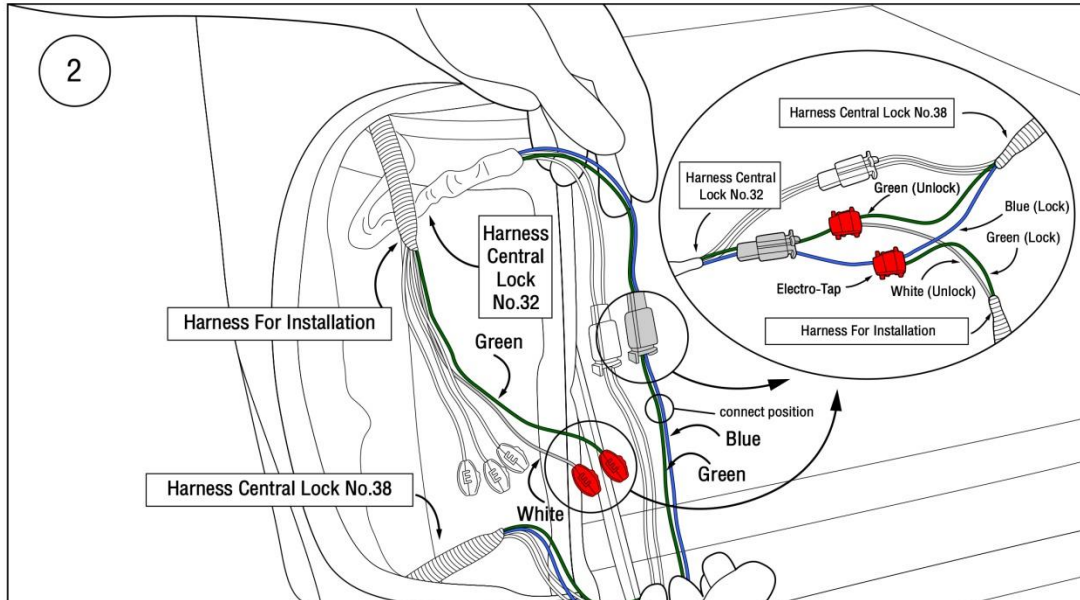

Bring White Wiring (Unlock) of the Harness for installation wiring set connects with the Green Wiring (Unlock) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

Bring Green Wiring (Lock) of the Harness for Installation wiring set connects with the Blue Wiring (Lock) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).

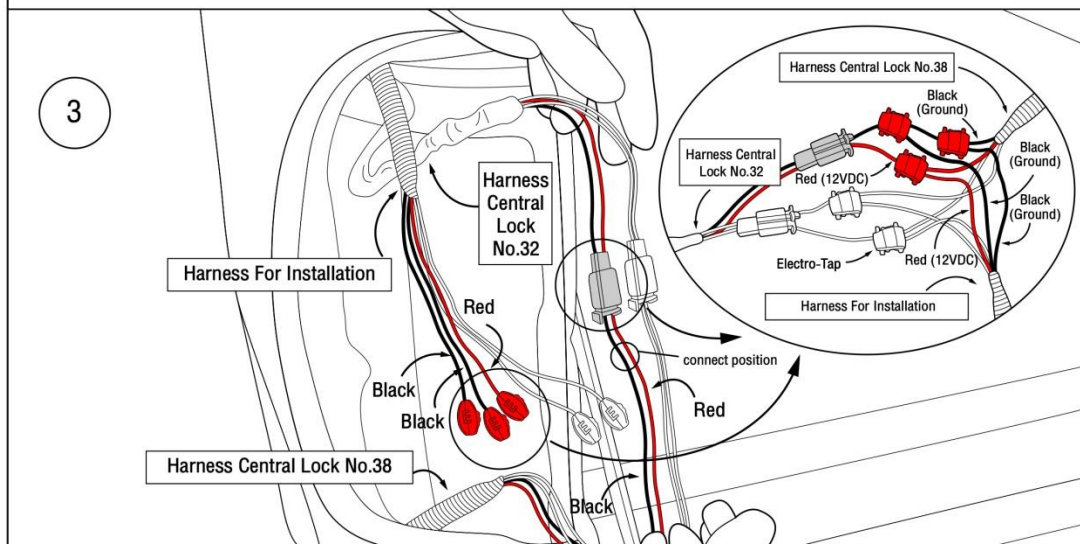


Bring the Red Wiring (12VDC) of the Harness for Installation wiring set connects with the Red Wiring (12VDC) of the Harness Central Lock No.38 wiring set by using the ELECTRO-TAP (Red Colour).


Bring the two Black (Ground) wiring of the Harness for installation set to connect with the Black (Ground) wiring of the Harness Central Lock No.38 set by using the ELECTRO-TAP (Red Colour).

User Manual


S-Plus V2

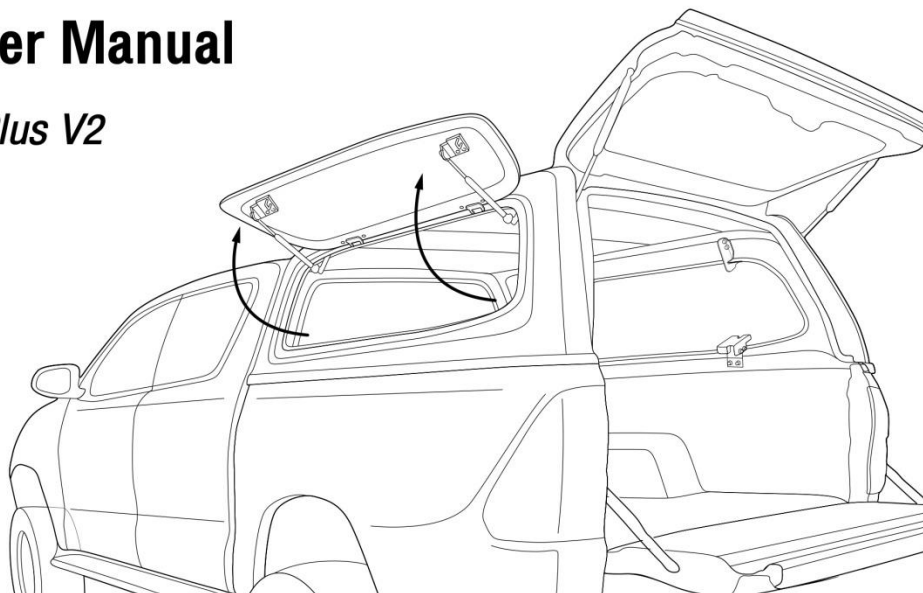


Instructions for using the Electric Lock.

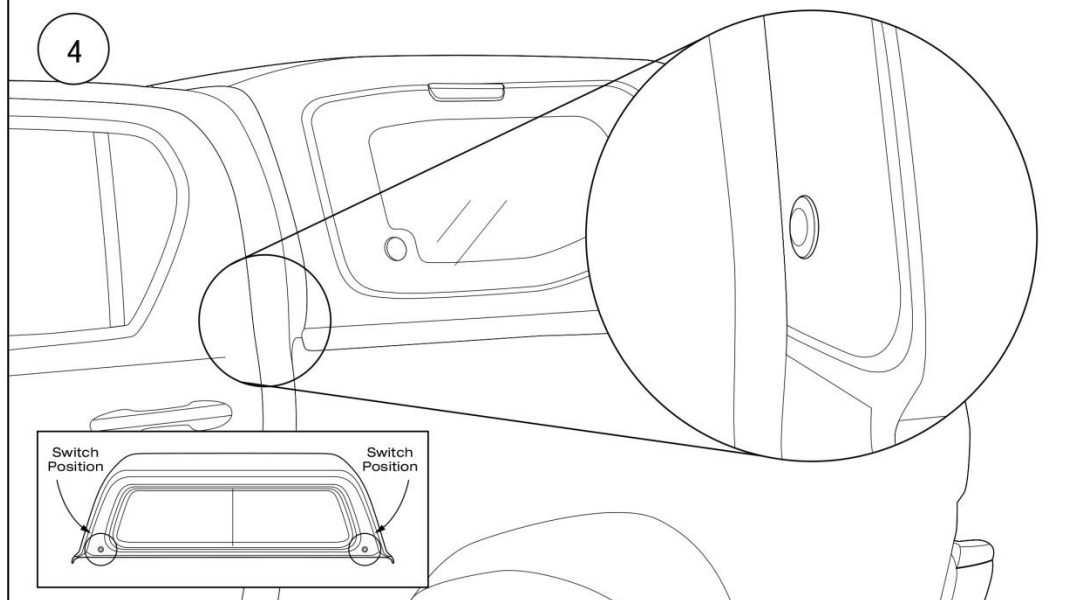


The picture shows Electric Lock switch button positions.

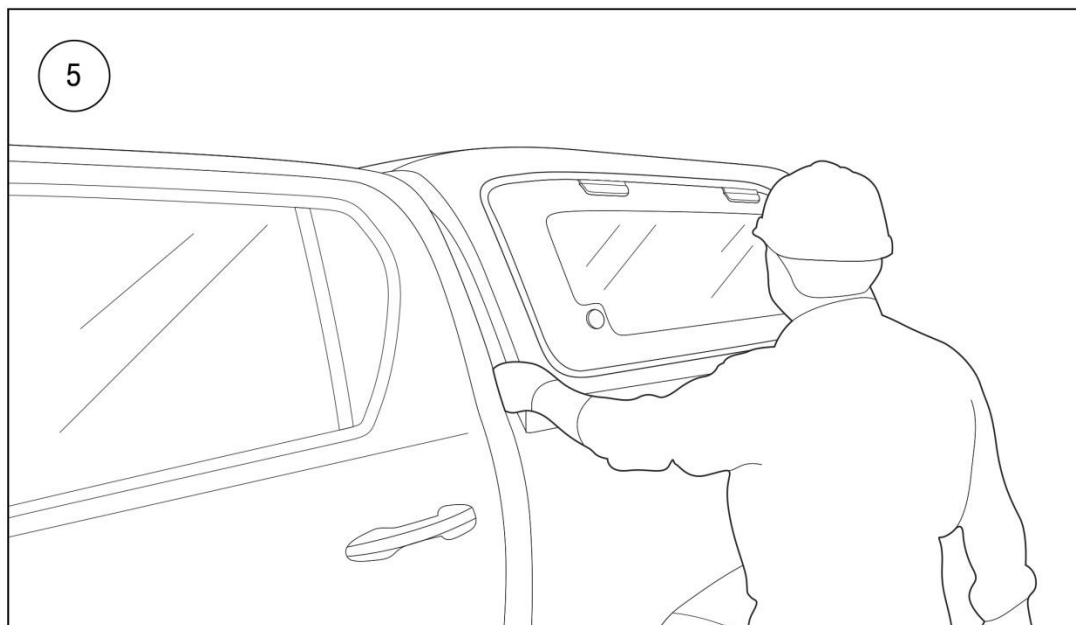


The picture shows the usage of Electric Lock button.

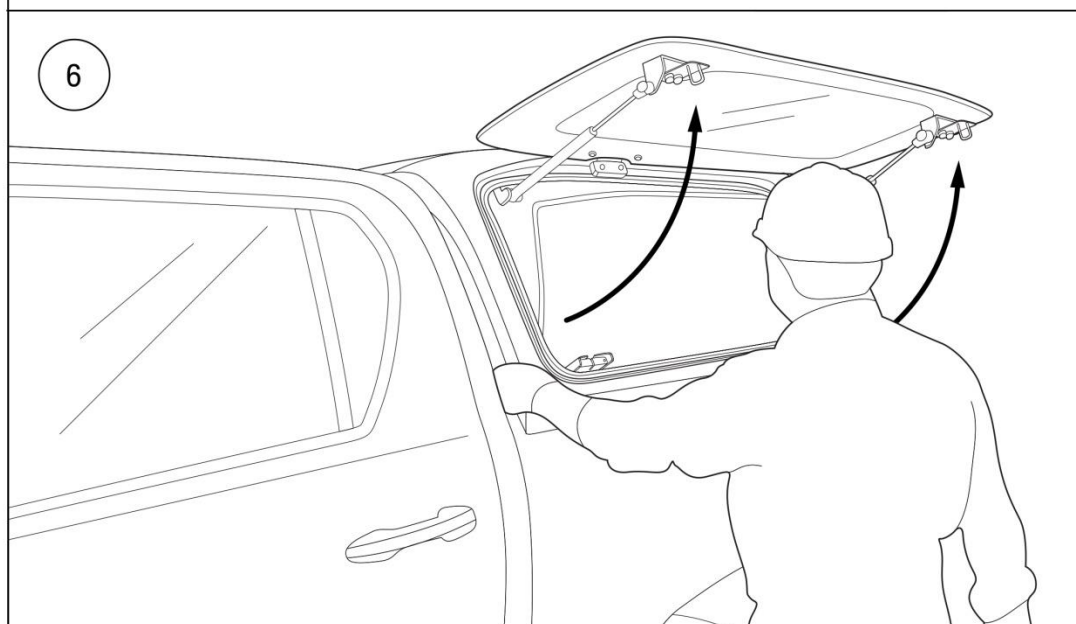

When push the Electric Lock button, the window will open as shown in picture.

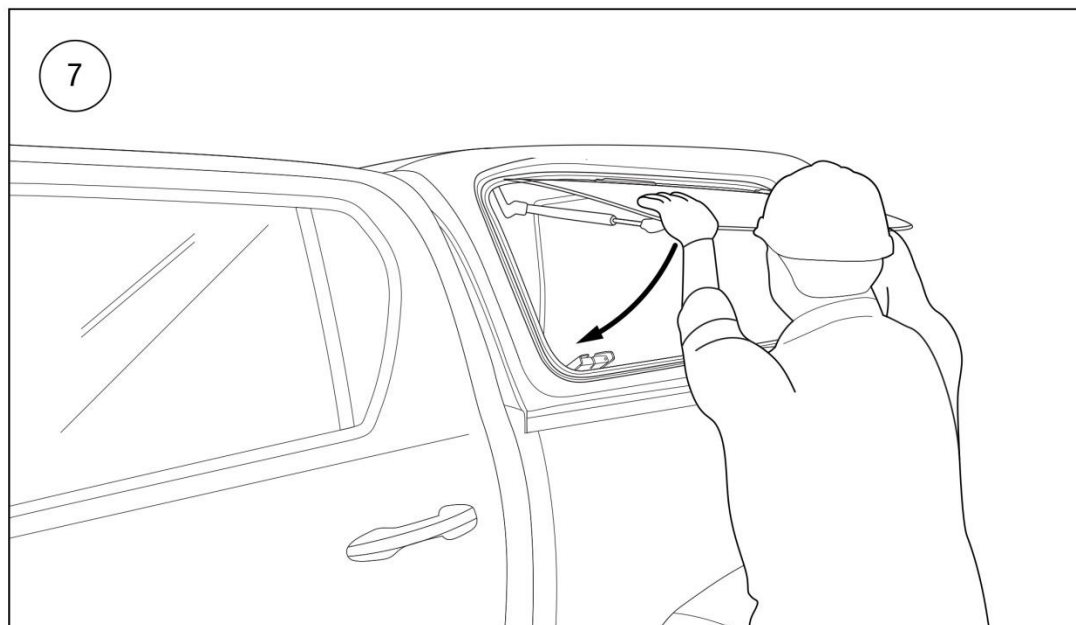


The picture shows the Electric Lock, window will be close.

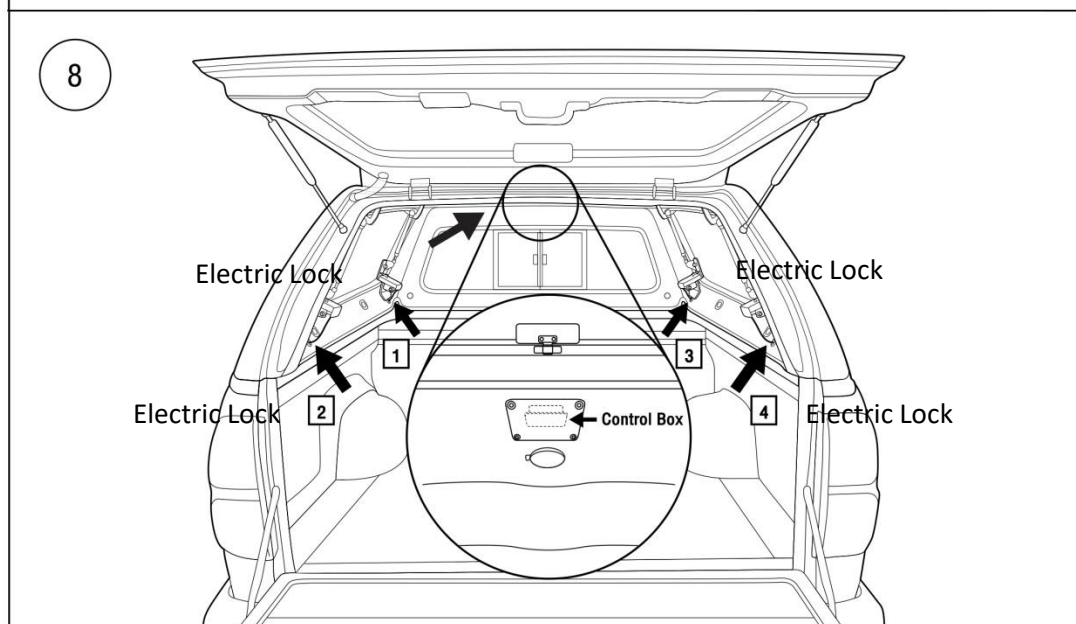

The picture shows the Electric Lock and Control Box position.

9

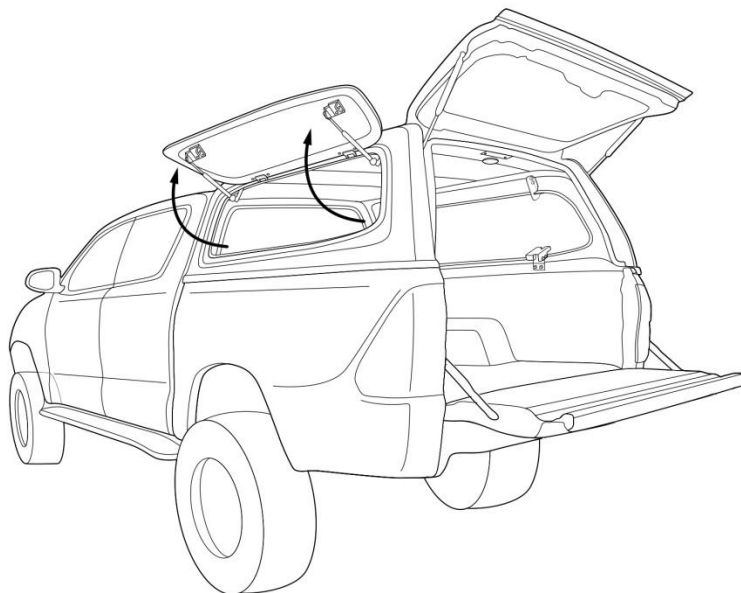

Complete the Electric Lock system.